

Operating manual

Econom 4000

STM5303 / SSO5304

Edition BC747302

Technical specifications subject to change without notice

HEADQUARTERS

Seewer AG

Heimiswilstrasse 42
3400 Burgdorf
Switzerland
Phone +41 (0)34 420 81 11
Fax +41 (0)34 420 81 99
info@ch.rondodoge.com

COMPETENCE CENTRE SCHIO

Doge Food Processing Machinery s.r.l.

Via Lago di Albano, 86
36015 Schio (VI)
Italy
Phone +39 0445 575 429
Fax +39 0445 575 317
sales@it.doge.rondodoge.com

SUBSIDIARIES

Seewer GmbH & Co.

Hoorwaldstrasse 44
57299 Burbach
Germany
Phone +49 (0)2736 203-0
Fax +49 (0)2736 203130
info@de.rondodoge.com

Seewer Rondo S.à.r.l.

PAE "Les Pins"
67319 Wasselonne Cedex
France
Phone +33 (0)3 88 59 11 88
Fax +33 (0)3 88 59 11 77
info@fr-rondodoge.com

Rondo Ltd.

Unit 7, Chessington Park
Lion Park Avenue
Chessington, Surrey KT9 1ST
Great Britain
Phone +44 (0)208 391 1377
Fax +44 (0)208 391 5878
info@uk.rondodoge.com

Rondo Inc.

51, Joseph Street
Moonachie, N.J. 07074
USA
Phone +1 201 229 97 00
Fax +1 201 229 00 18
info@us.rondodoge.com

Rondo Bakery Equipment Inc.

267 Canarctic Drive
Downsview, Ont. M3J 2N7
Canada
Phone +1 416 650 0220
Fax +1 416 650 9540
info@ca.rondodoge.com

Rondo S.r.l.

Via Lago di Albano, 86
36015 Schio (VI)
Italy
Phone +39 0445 576 635
Fax +39 0445 576 641
info@it.rondodoge.com

OOO Rondo Doge

Varschavskoje Chaussée, D. 17, Str. 1
117105 Moskau
Russia
Phone 007 (495) 786 39 06
Fax 007 (495) 788 98 20
info@rondodoge.ru

Seewer Rondo

Asean Regional Office
No. 14-1 Mezzanine Floor
Jalan 11/116B
Kuchai Entrepreneurs Park
Off Jalan Kuchai Lama
58200 Kuala Lumpur
Malaysia
Phone +60 3 7984 55 20
Fax +60 3 7984 55 95
rondoasean@my.rondodoge.com

Index

1 Safety information	B0100339
1.1 Explanation of symbols	01 - 1/4
1.2 Explanation of warning signs	01 - 1/4
1.3 Safety elements	01 - 1/4
1.3.1 Safety guards	01 - 1/4
1.4 Safety instructions and information which must be followed	01 - 2/4
2 Transporting, setting up, connecting, dismantling, storing	B0200402
2.1 Machine delivery	02 - 1/5
2.2 Transportation	02 - 1/5
2.3 Unpacking the machine	02 - 1/5
2.4 Setting up the machine	02 - 2/5
2.4.1 Installation of the machine tables (SSO5304)	02 - 2/5
2.4.2 Mounting forked supports (SSO5304)	02 - 3/5
2.4.3 Tensioning the conveyor belts	02 - 4/5
2.4.4 Mounting the dough catch pan (SSO5304)	02 - 4/5
2.5 Conditions for initial operation of the machine	02 - 5/5
2.6 Moving direction test	02 - 5/5
2.7 Moving the machine (SSO5304)	02 - 5/5
3 General data about the machine	B0300419
3.1 General information	03 - 1/4
3.1.1 The machine's application	03 - 1/4
3.1.2 Noise values	03 - 1/4
3.1.3 Temperatures	03 - 1/4
3.1.4 Ambient humidity	03 - 1/4
3.1.5 Machine weight	03 - 1/4
3.1.6 Working area for the operating personal	03 - 1/4
3.2 Machine models	03 - 2/4
3.2.1 STM5303	03 - 2/4
3.2.2 SSO5304	03 - 2/4
3.3 Prerequisites	03 - 2/4
3.4 Full view of the machine	03 - 3/4
3.5 Operating elements	03 - 4/4
3.5.1 Safety guards	03 - 4/4
3.5.2 Roller gap adjusting mechanism	03 - 4/4
3.5.3 Push button for dough thickness control stop	03 - 4/4
3.5.4 Black push buttons	03 - 4/4
3.5.5 Red push button	03 - 4/4
4 Putting into operation	B0400355
4.1 Preparing for operational readiness	04 - 1/1
4.2 Starting/stopping the machine	04 - 1/1


5 Operation	B0500419
5.1 Operating instructions	05 - 1/2
5.1.1 Sheeting	05 - 1/2
5.2 Sources of error in the sheeting process	05 - 2/2
6 Cleaning	B0600372
6.1 Cleaning	06 - 1/4
6.1.1 General information	06 - 1/4
6.1.2 Care	06 - 4/4
7 Maintenance	B0700438
7.1 General information on the maintenance of the machine	07 - 1/1
7.2 Maintenance list	07 - 1/1
7.3 Replacement parts list	07 - 1/1
8 Trouble shooting	B0800387
9 Technical data	B0900418
9.1 Technical data	09 - 1/3
9.2 Additional information	09 - 3/3

Hint for operating manual: The numbers of the illustrations (Ex. ——— 1) are numbered chapterwise.

1 Safety information

1.1 Explanation of symbols




All the sections in this operating manual containing safety instructions which absolutely must be observed are marked with this symbol  and with a number.

1.2 Explanation of warning signs



Sign indicating prohibited activity

Reaching under the closed safety guard is prohibited!

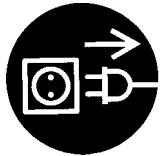


Instruction and information signs

Make sure to disconnect the plug before opening!



Danger warning sign

Danger warning

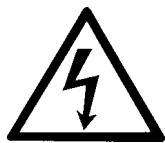

High-Voltage warning sign

Warning against electrical shock
Disconnect mains plug before opening.

1.3 Safety elements

1.3.1 Safety guards



Operation

1. The safety guards protect the operator against inadvertent contact with the rollers.
 2. The machine is stopped by lifting up the safety guard. Raising the safety guard even just slightly will cause the machine to discontinue operation.
- Lift the safety guard
Machine stops.
(In order to restart the machine, see Starting/stopping the machine, chapter 4.2).

1.4 Safety instructions and information which must be followed



- The dough sheeters are built for the food industry exclusively for the sheeting, booking, and final sheeting of dough pieces.
- Any other use of these units is not in accordance with the purpose for which they are built. Therefore, the manufacturer will not be liable for any accidents or damage arising as a result of unauthorized use; the risk in any such instance will be borne solely by the user.



- Authorized use also means that the user must follow all instructions prescribed by the manufacturer in respect of operation, maintenance and service.



- Any work on the electrical components of the machine, in particular the correct professional mounting of the mains plug, may only be carried out by qualified personnel who are familiar with the prescribed safety instructions. Defective cables and mains plugs must be immediately replaced by qualified personnel.



- Protective covers over the electrical controls and the mechanical moving parts may only be removed by professionally qualified personnel and must be remounted before the machine is put back into operation.



- Any unauthorized changes made to the machine, and in particular, to the safety devices on the machine will automatically exclude any liability on the part of the manufacturer for accidents or damage sustained as a result of such changes.



- The machine may only be connected to electricity using the mains plug! No permanent electrical installation may be carried out using, for example, terminal screws.



- The machine may only be connected to the mains using the plug once the machine has been fully assembled.



- Before beginning any repairs, service or cleaning work on the machine, the electricity supply to the machine must be interrupted (pull out mains plug).



- Safety devices on the machine may not be adjusted, shorted-out or expanded.



- Operation of the machine when any of the safety devices is out of order is prohibited.



- Defective safety devices must be replaced immediately with new original parts.



- Machine parts located in the area in which the dough is being processed, and whose surface coating becomes worn (e.g. chrome plate worn off) must be replaced.



- The machine may not be lifted on the machine base (SSO5304), when being moved. The machine should be fastened and transported on a pallet without the table. The safety guard should be fastened in the upper position.



- Reaching under the closed safety guard is prohibited!



- The machine may only be operated with the machine tables mounted!



- Observe the correct belt tension!



- Do not deposit any loose objects such as knives, tools, articles of clothing, etc. in the area where the dough is located.



- Table models (STM5303) must be placed so as to rest properly over the whole work table!



- Check to ensure that there are no loose screws in the area where the dough is located.



- The machine may not be operated without the use of a scraper.

- Flour dust can cause respiratory tract difficulties and allergies. Limit the use of flour to a minimum.
- Use 25 kg sacks rather than 50 kg sacks and empty the sacks in several stages.



- Avoid draughts.
- The use of a flour duster with a plastic protective skirt is recommended.
- The use of a compressed air for cleaning the flour duster and the work surface is not permissible.
- The use of a protective mask during the operations that generate dust, is recommended.
- The use of a dust extraction system in the bakehouse is recommended.



- Any disposal of the machine must be carried out in accordance with environmentally-accepted practices. The operators are fully responsible for ensuring that such practices are followed.



- This machine is not designed to be used in explosive ambient.

2 Transporting, setting up, connecting, dismounting, storing

2.1 Machine delivery

The machine is delivered in its original packaging.

- Report any claims for damage caused as a result of transportation directly to the freight handlers (see the packaging: The delivery documentation is found here)



STM5303

2.2 Transportation

When being transported, the machine must be fastened onto a pallet (SSO5304).



The tables must be dismounted and the safety guards fixed in the upper position.



SSO5304

(For machine weight, see Technical data, chapter 9.1)



2.3 Unpacking the machine

The machine must be set up on a level, even floor surface (SSO5304). For further information regarding the ambient conditions required for the machine, see General information chapter 3.1.

- Unpack tables and attachments
- Check all items received against the delivery slip to ensure completeness

2.4 Setting up the machine




Two people are required to set up the machine!


2.4.1 Installation of the machine tables (SSO5304)

- Loosen screws (1) with hexagon wrench

- Dismount the front and rear lateral bracket (2) on the machine table

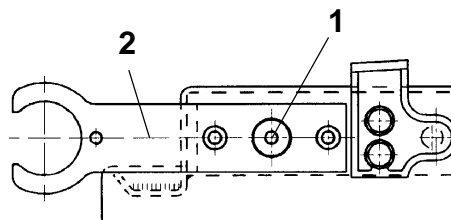

- Place the lateral brackets (2) on the supports (3) of the driving roller (4)

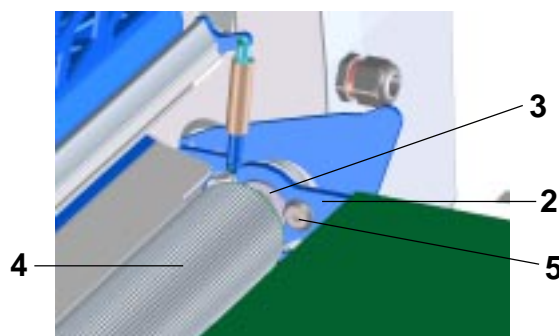


Lateral bracket with lock nut (5) must absolutely be at the rear!

- Mount the lateral brackets (2), tighten the screws (1) using a hexagon wrench




- Lift table (6) up until it is inserted into the safety guard (7). The machine table is now secured.

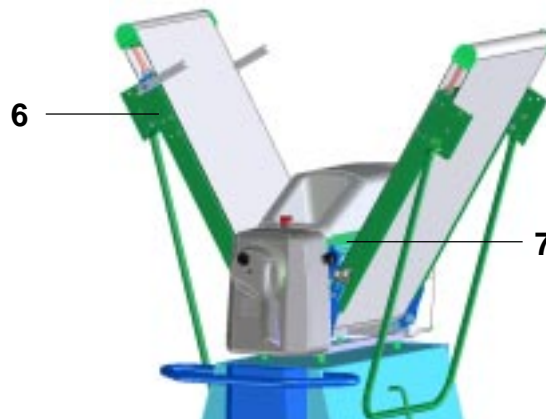


2. Transporting, setting up, connecting, dismounting, storing

2.4.2 Mounting forked supports (SSO5304)


- Position forked support (8) and fix it by using nut (M8) (9)

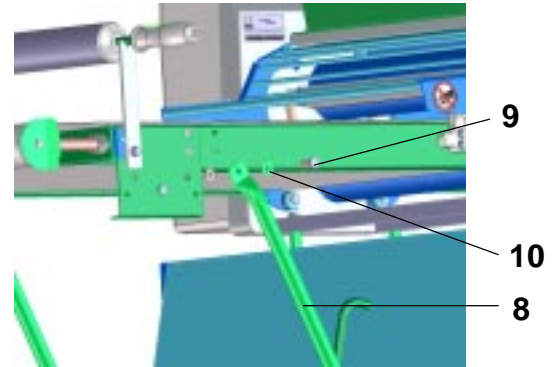

- Fix it on both sides by using two nuts (M8) and two washers (10)

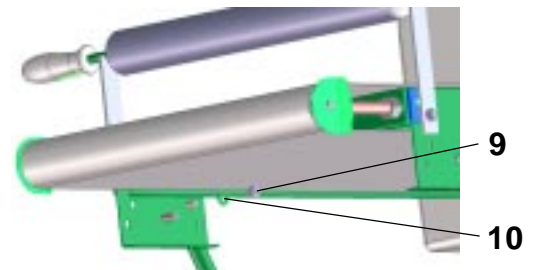

Position of the forked support (8) when the machine table is hinged down.

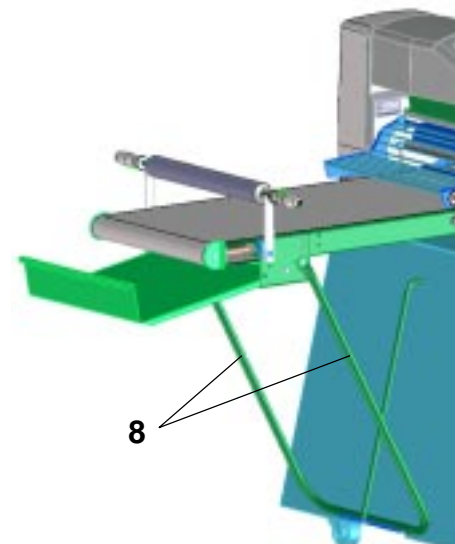


2.4.3 Tensioning the conveyor belts

Tense the conveyor belts only enough so that the heaviest pieces of dough (max. 4 kg) can still be moved along the belt without the conveyor belt dragging.

Proceed as follows:

- Retighten the left and right tension nuts (11) so that they are even and parallel
- Remeasure distance „X“ on both sides using a millimeter measuring instrument Distance „X“ must be identical on both sides.
- Switch on the machine (see Putting into operation, chapter 4 / Operating elements, black push buttons, chapter 3.5)
- Observe both the left and right running movement of the conveyor belt

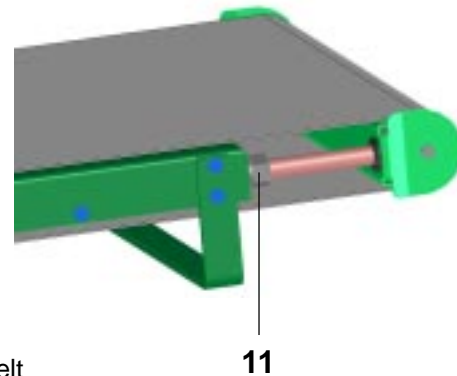

If the belt runs off toward one side, proceed as follows:

- Retighten the side where it runs off using a tension nut
- or
- Loosen on the opposite side using a tension nut
 - Monitor the belt, and if necessary, correct it until it runs exactly in the middle of the table


Repeat this procedure several times, if necessary. Routinely monitor the belt during the initial hours that the machine is operational, and if necessary, correct again.

Tensioning and adjusting the conveyor belts demands patience!

Prior to carrying out each further correction, allow the machine to run for at least 30 seconds. Before putting the machine into operation, the conveyor belts must be rubbed lightly with flour in order to prevent the dough from sticking to the belt.

2.4.4 Mounting the dough catch pan (SSO5304)

- Remove the protective foil on the dough catch pan (12)
- Push in the dough catch pan on both sides

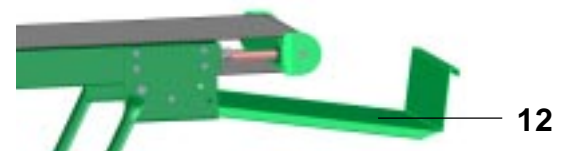

2.5 Conditions for initial operation of the machine



Power supply and frequency at the main circuit to which the machine is connected, must be in accordance with specifications contained on a identification plate affixed to the machine. (This plate is found on the cable lead-through on the machine base).



Direct connection without a plug is prohibited! Ensure that the connection is made professionally and in accordance with local regulations. (An electrical schematic is delivered with every machine. It is to be found next to the electrical control in the machine base).



- Connect the machine plug to the power supply system



- The machine may only be operated with mounted machine tables!

2.6 Moving direction test



Observe to ensure that the belts are properly tensioned.

- Push the black push button (13) on the left (only impulse).
The conveyor belts must move to the right.

13




If the conveyor belts move in the wrong direction:

- Exchange two phases in the power plug

2.7 Moving the machine (SSO5304)

- On the operator's side, lift up using the safety rail (14)

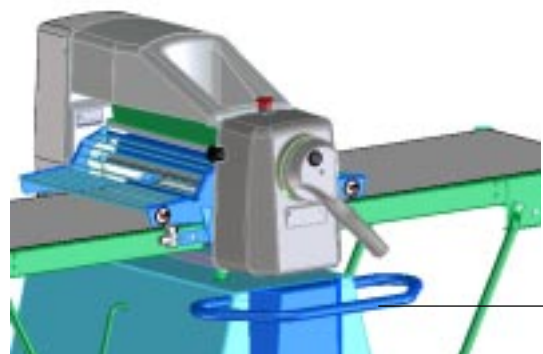

14

3 General data about the machine

3.1 General information

3.1.1 The machine's application



The machine is suitable for sheeting, booking and final sheeting of dough pieces for the food industry.

This product is a technical working tool which is designated to be used exclusively for work.

Booking

Booking in fat. Through sheeting to a thickness of approx. 6 - 11 mm and a subsequent folding of the dough there is a resulting formation of layers of fat and dough. A repetition of this process yields many thin layers.

Final sheeting

Includes sheeting the piece of dough to the necessary final thickness required for further processing.

3.1.2 Noise values

The emission value at place of operation is smaller than „70 dB(A)“, according to EN1674.

3.1.3 Temperatures

The ambient temperatures permissible for the machine: + 5° to + 40°C

Permissible temperatures for storage of the machine: - 25° to + 55°, for brief periods of time up to + 70°C

3.1.4 Ambient humidity

The ambient humidity permissible for the machine lies in the area of 30 % - 95 %, relative humidity, uncon-densed (for the dusting flour in the flour container, the relative humidity should not exceed 60 %).

3.1.5 Machine weight

Total weight:

STM5303: approx. 80 kg

SSO5304: approx. 145 kg



(Compare Technical data, see chapter 9.1)

3.1.6 Working area for the operating personnel

The hatched area shows the work area designated for the operating personnel.




On the STM5303 models, the machine must cover the whole width of „X“ on the work table!

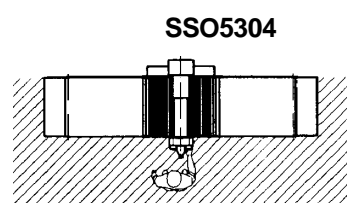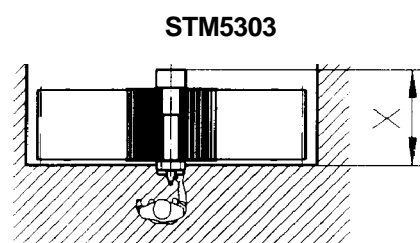

3.2 Machine models


3.2.1 STM5303

Table model
(see Technical data, chapter 9.1)

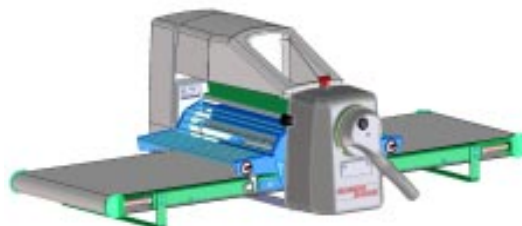

3.2.2 SSO5304

Socle model
(see Technical data, chapter 9.1)

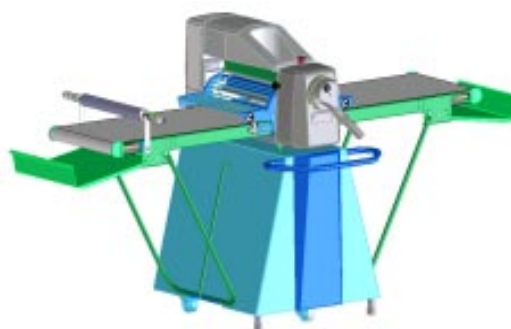




3.3 Prerequisites

In order for the dough to be sheeted by the machine, the following prerequisites must be fulfilled:




- Max. dough piece weight 4 kg
- Flour the dough pieces
This will serve to prevent the dough from sticking to the rollers and scrapers.

3.4 Full view of the machine

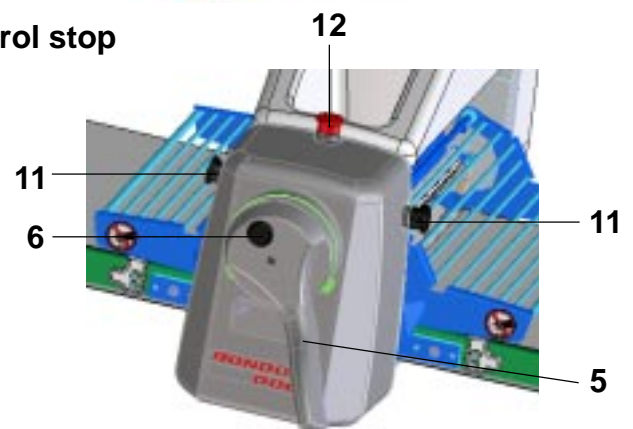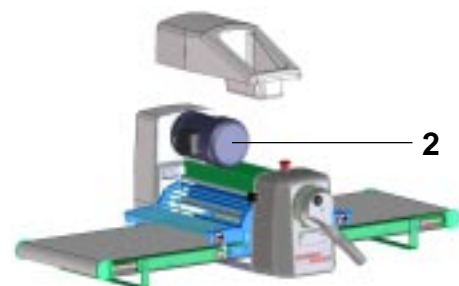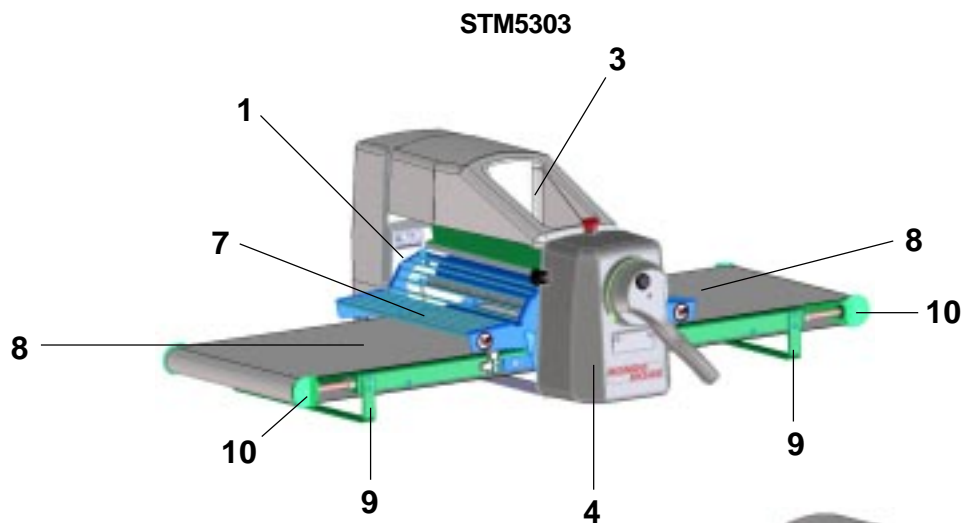

- 1 Rear housing
- 2 Motor
- 3 Flour container
- 4 Front housing
- 5 Roller gap adjusting mechanism
- 6 Push buton for dough thickness control stop
- 7 Safety guard
- 8 Conveyor belt
- 9 Forked support
- 10 Idle roller
- 11 Black push button to switch on
- 12 Red push button to switch off
- 13 Machine base
- 14 Dough catch pan


SSO5304

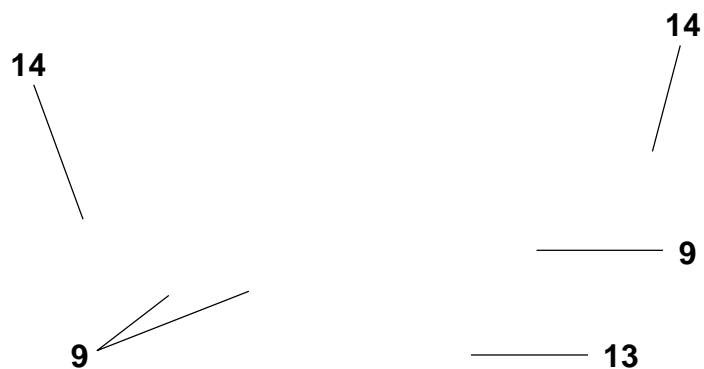

4 Putting into operation

4.1 Preparing for operational readiness

- Fold both safety guards (1) downwards
(see Safety guards, chapter 3.5.1)

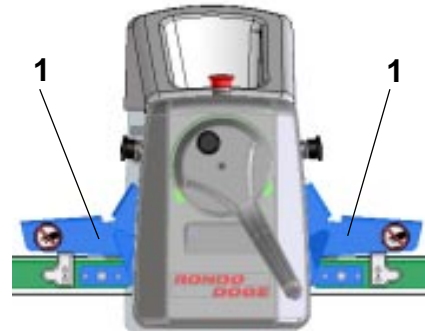

By SSO5304:

- Pull out dough catch pan (2) on both sides



4.2 Starting/stopping the machine

In order to start up the machine:


- Briefly press the left start push button (3)
The conveyor belts begin to move from left to right.

or

- Briefly press the right start push button (3)
The conveyor belts begin to move from right to left.

In order to stop the machine:

- Press red push button (4)

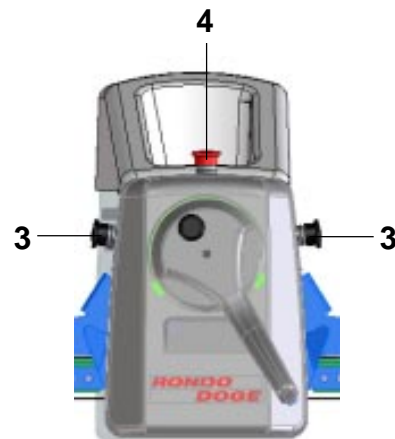

5 Operation

5.1 Operating instructions



Reaching under the safety guard when it is closed is prohibited!



5.1.1 Sheeting

The machine is designed to accommodate dough pieces with a maximum weight of 4 kg!



Never leave loose objects such as knives, tools, articles of clothing, etc. lying in the area where the dough is located.

- Set desired roller gap (maximum 30 mm/minimum 0,3 mm) as follows:
- Push lever (1) towards the roller gap adjusting mechanism (2), do not release
- Set the desired roller gap, by using the roller gap adjusting mechanism (scale)
- Release lever (1)
Lever (1) must lock into place.
- Press the knob (3)
- Turn dough thickness control stop (4) to the limit stop
- Release knob
- Place the dough piece (max. 4 kg) on the machine table (do not "throw" dough pieces on the table!)
- Start up the machine as follows:
- Briefly press the black push button (5) on the dough's infeed side (see Starting/stopping the machine, chapter 4.2)

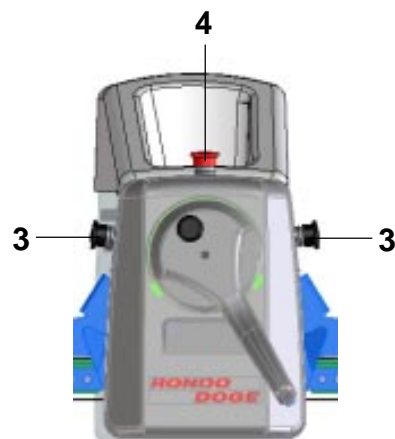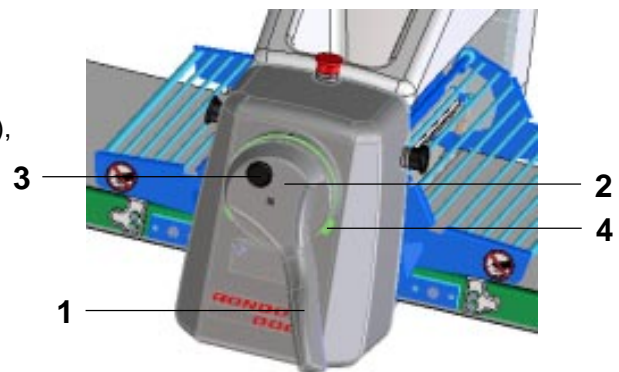

5. Operation


Once the dough piece has fully cleared the rollers:

- Press red push button (7) (above on the housing)
Machine stops.

- Manually set the next roller gap (depending on type of dough) (see Set desired roller gap, chapter 5.1)

- Release lever (1)
Lever (1) must lock into place.

- Briefly press black push button (5) on the dough's infeed side
(see Starting/stopping the machine, chapter 4.2)

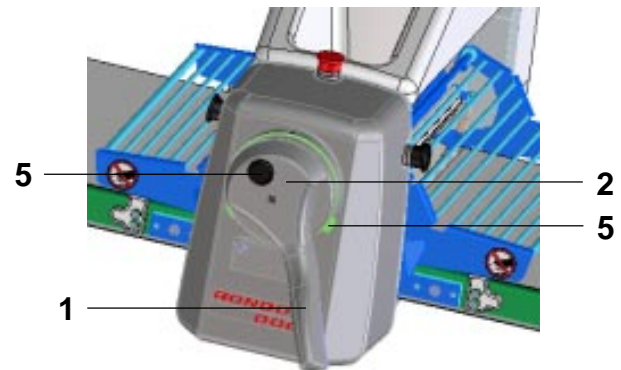

Once the dough piece has fully cleared the rollers:

- Briefly press red push button (7)
Machine stops.

- Repeat this procedure until the desired final thickness of the dough has been obtained.

5.2 Sources of error in the sheeting process

Fault finding	Cause / defect	Remedy / to remove
1. Dough piece sticks, tears underneath.	Dough too moist Dough piece rubs against scraper bar.	Put more flour on the dough piece. Mount the scraper properly (see Mounting the scraper, chapter 6.1).
2. Dough piece piles up (ripples).	Reduction steps too big.	Select smaller reduction steps: Let down the roller in smaller steps (see Sheeting, chapter 5.1.1).
3. Dough sheet tapers.	Reduction steps too small.	Select bigger reduction steps: Let down the roller in bigger steps (see Sheeting, chapter 5.1.1).

6 Cleaning

6.1 Cleaning




The machine must never be cleaned using spraywater, high-pressure cleaners, steam cleaning machine or any similar cleaning methods.

6.1.1 General information




Dismounting the scraper

- Open rollers fully
- Lock the safety guard into the upper position
- Using the thumb, push the front and rear scraper lever (1) downwards

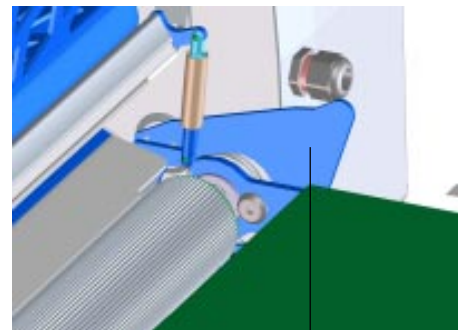

- Lift the scraper (2) out of the scraper mouting
- Pull out the scraper (2)
- Clean the scraper (see Care, chapter 6.1.2)

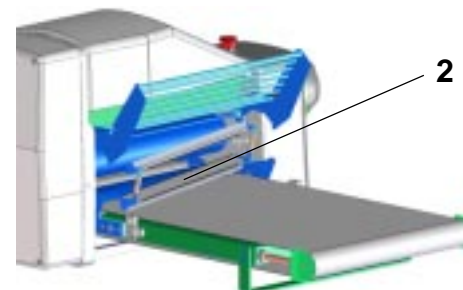

6. Cleaning



Exchange of scraper blades

Required tool: Allen key No. 4

Exchange of scraper blades:

- disassemble the spring clamp (3) on the left or the right side

- slide the old scraper blade (4) off

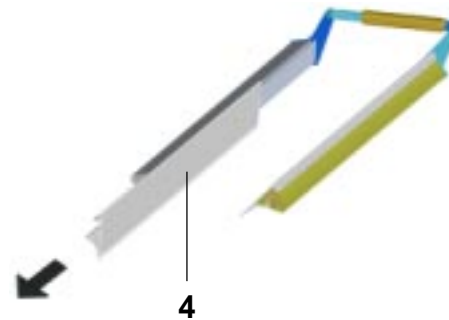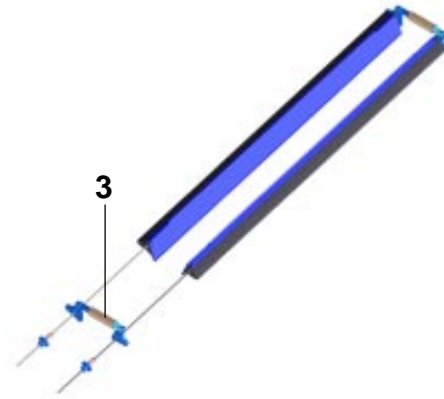


Attention

For protection of the fingers, please use a cloth. The edges of the blades are sharp and there is danger of cutting oneself.

- Assemble the spring clamp in reverse order

- Assemble the new scraper blades in reverse order

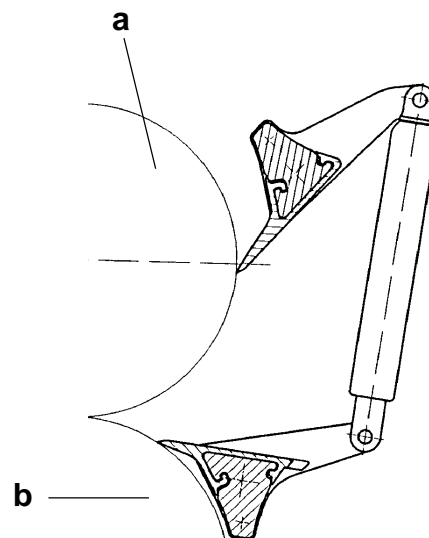

Mouting the scraper

- To remount the scraper, carry out the dismounting instructions in reverse order

a upper roller

b lower roller

Dismounting machine tables/conveyor belts




In order to dismount the machine tables and conveyor belts, proceed as follows:



- Lift up the safety guards


- Pull out the mains plug

- Loosen the tension nuts (5) parallel, in order to retighten the conveyor

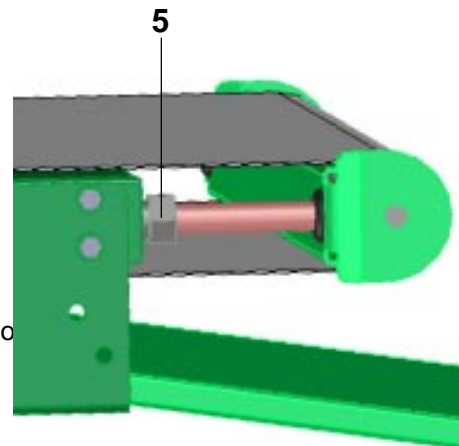

- Dismount forked supports (only for SSO5304)
(in reverse order to Mounting the forked supports, see chapter 2.4.2)


- Dismount forked supports (6) (STM5303)

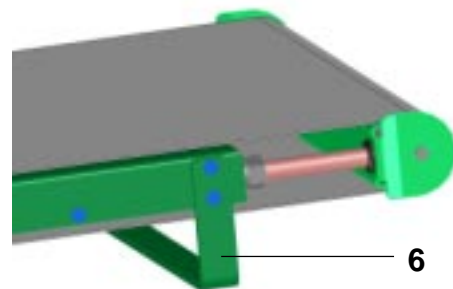

- Dismount tables (in reverse order to Installation of the machine tables, see chapter 2.4.1)

In order to dismount the conveyor belts, proceed as follows:


- Loose screw (7)

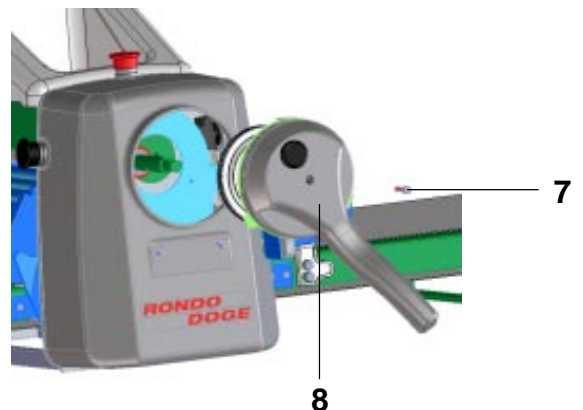


- Remove roller gap adjusting mechanism (8)

- Loose both screws (9) of the front housing (10)

- Remove front housing

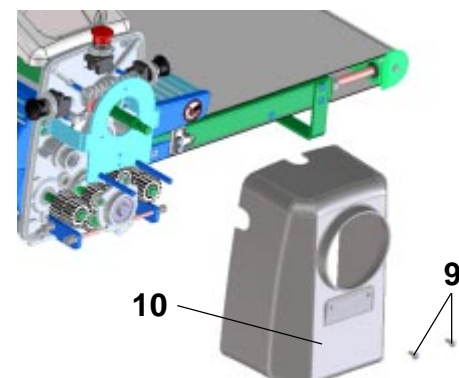

- Pull the driving rollers (11) ahead out the machine base
- Remove conveyor belt
- The conveyor belt can now be cleaned or replaced (see Care, chapter 6.1.2/Replacement parts list, chapter 7.3)

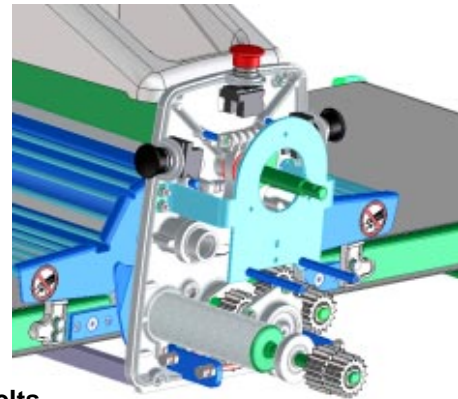

Mounting machine tables and conveyor belts



The right and left driving roller, as well as the machine tables must not be exchanged!

- Remount the machine tables and conveyor belts in reverse order of dismounting

6.1.2 Care

Part	see	daily see legend	weekly see legend
Machine head and machine base	Chapter 3.4		A
Scraper	Chapter 6.1	A	
Cotton belt	Chapter 6.1	B	(E)
Synthetic belt	Chapter 6.1	B	C
Dough catch pan	Chapter 2.4.4	A	
Driving roller	Chapters 2.4.1 / 6.1		D
Idle roller	Chapter 2.4.3		D
Flour container	Chapter 3.4	B	



Alcohol, solvents or cleaning materials which exceed a ph value of 8 must not be used for cleaning purposes! Only those cleaning materials which are approved for use in the food industry may be used.

Legend

A Wet clean using a cloth and soapy water

B Dry clean using a brush

C Wet clean using a brush

D Using a brush and plastic scraper, remove any remaining pieces of dough

E Wash cotton belt monthly as follows:

- Water temperature must not exceed 40° C

- Once belt has been washed, hang it over a rod and weight it down with a weight of approx. 10 kg

7 Maintenance

7.1 General information on the maintenance of the machine



Any defects on the machine must be repaired by an authorized customer service representative!

7.2 Maintenance list

What/Part	Activity	daily working time less than 4 h	daily working time 4 - 8 h	daily working time more than 8 h
Conveyor belts	check, if necessary: replace	M	W	W
Scraper blades (Dough sheeter)	check, if necessary: replace	M	W	W
Table drive and roller gap adjusting mechanism in the front housing	grease according to the Service manual	3 J	2 J	J
Roller drive and adjusting in the rear housing	grease according to the Service manual	3 J	2 J	J

Legend

W weekly
M monthly
J annually
2J every 2 years
3J every 3 years



The use of conveyor belts not supplied by Rondo-Doge can lead to premature wear or destruction on machine parts (coupling, drive rollers).

7.3 Replacement parts list

Item-No.	Description	Dimensions	Application
122773T02	Scraper complete	-	STM5303, SSO5304
122775T02	Scraper blade	-	STM5303, SSO5304
79302	Cotton belt	1490 x 475 mm	STM5303
120750T04	Cotton belt	1940 x 475 mm	SSO5304
121344T30	Synthetic belt	1470 x 475 mm	STM5303
121344T31	Synthetic belt	2020 x 475 mm	SSO5304
8934	Fuse 1,0 AT	1,0 AT slow ø 5 x 20 mm	STM5303, SSO5304

8 Trouble shooting

Fault finding	Cause / Defect	Remedy / To remove
1. Machine stands still after assembly.	Main switch not/not correctly plugged in.	Plug in the main switch.
	Safety guard not closed.	Close safety guard.
	Right or left Start push-button not pressed.	Press the desired Start push-button.
	Machine tables not level.	Put the machine tables in a even level position.
2. When pressing the right Start push-button, the conveyor belts move to the right.	Sense of rotation reverse (mains).	Moving direction test (see chapter 2.6).
3. Machine runs intermittently, stops, rattles.	Safety guard limit switch incorrect. Support for safety guard incorrect. Loose cables, wires.	Readjusting by an expert. Adjust supporting eccentric. Adjust loose wires, cables.
4. Main drive motor runs, rollers and conveyor belts stand still.	Belt drive defective.	Call after-sales service! Remove rear cover of machine base and roller head, replace belts or toothed belts if necessary.
5. Conveyor belts loops up, motor and rollers run.	Belt tension too weak. Driving roller dirty.	Tension conveyor belt equally. (see Tensioning the conveyor belts, chapter 2.4.3). Clean driving roller (see Care, chapter 6.1.2).
6. Machine only runs to one side.	Defective motor contactor.	Call specialist (electrician). Replace motor contactor.
7. Discharge conveyor belt stands still or jerks.	Table drive defective Belt tension too weak.	Call after-sales service. Tension the belt equally (see Tensioning the conveyor belts, chapter 2.4.3).
8. Dough piles up before the roller or passes under the roller between scraper and infeed conveyor belt.	Scrapers inserted incorrectly. Scraper blades worn out.	Close the scraper levers properly (see Cleaning, Mounting the scraper, chapter 6.1). Check and if necessary adjust scraper levers by means of eccentric (center of motion). If necessary replace scraper blades or the complete scraper.

Fault finding	Cause / Defect	Remedy / To remove
9. Conveyor belts run to one side, tear at the edges.	Incorrect belt tension.	Tension conveyor belt (see Tensioning the conveyor belts, chapter 2.4.3).
	Drive roller dirty	Clean drive roller (see Care, chapter 6.1.2).
10. Cotton conveyor belts too short after washing.	Washing temperature too high.	Washing temperature max. 40° C. Hang washed conveyor belt over a rod and weigh it down below with approx. 10 kg.
11. All other errors/failures.		Inform nearest "Rondo-Doge" after-sales service giving as much information as possible.

9 Technical data

9.1 Technical data

Technical Data	STM5303
Machine base	no (table model)
Belt width	475 mm
Table width	487 mm
Total table length	1560 mm
Req. floor-space: in working position	1040 x 1560 mm
in resting position	1040 x 810 mm
Roller length	500 mm
Roller gap	0,3 - 30 mm
Sheeting speed of discharge conveyor	50 cm/sec
Rated power	0,75 kVA / 0,5 kW
Supply voltage	3 x 200 - 420 V, 50 / 60 Hz 1 x 200 - 230 V, 50 Hz 1 x 200 - 230 V, 60 Hz 1 x 110 V, 60 Hz
Machine weight:	approx. 80 kg

Technical specifications subject to change without notice

Technical data	SSO5304
Machine base	Socket
Belt width	475 mm
Table width	487 mm
Total table length	2060 mm
Req. floor-space: in working position	1045 x 2500 mm (dough catch pan extended)
in resting position	1045 x 1040 mm
Roller length	500 mm
Roller gap	0,3 - 30 mm
Sheeting speed of discharge conveyor	50 cm/sec
Rated power	0,75 kVA / 0,5 kW
Supply voltage	3 x 200 - 420 V, 50 / 60 Hz
Machine weight:	approx. 145 kg

Technical specifications subject to change without notice

9.2 Additional information

All sheeters from Rondo-Doge have the following quality features:

- The conveyor belts made of plastic material:

All plastic coated conveyor belts used on our machines are approved for coming into contact with food stuff and correspond with the requirements of the FDA (Food and Drug Administration, USA).

- The conveyor belts made of cotton:

The fabric consists of 100 % cotton and has a non-toxic finish.

- The rollers are hard-chrome plated. This coating is approved for coming into contact with food stuff.

- The scraper blades are made of POM-C plastic material. This material is approved for coming into contact with food stuff and corresponds with the requirements of the "Bundesgesundheitsamt BGA", Germany.

- The dough catch pans are made of stainless steel (chromium nickel steel, DIN Mat. no. 1.4301, 1.4016) which is approved for coming into contact with food stuff.

- The rollers of the manual and the automatic dough reeler that are touching the dough are made of aluminium, anodised colourless and are approved for coming into contact with food stuff.

- Flour container:

The flour container is made of plastic material (ABS). This material is approved for coming into contact with food stuff.